



PACK DE 2 MANETTES SANS FIL TWIN PADS



Ref. JWSVW00064 – Model SP5099C

©2019 E-Concept. All rights reserved. "SteelSeries", "E-Concept" and their logos are trademarks and/or registered trademarks of "SteelSeries", and/or its affiliated companies. "Nintendo", "Switch" and their logos are trademarks and/or registered trademarks of Nintendo. All other product names and images, trademarks or registered trademarks are properties of their respective owners. This is a product 100% NOT official and is NOT manufactured, guaranteed, sponsored, endorsed or approved by Nintendo of America Inc. Made in China. Product features, appearances and specifications may be subject to change without notice. Please retain this information for future.

about STEELPLAY® TWIN PADS WIRELESS CONTROLLERS

The Twin Pads Steelplay wireless controllers offer you ergonomics and comfort to fully enjoy your console. They feature a motion and vibration detection system to make your game sessions as immersive as possible.

CONTENU

- 2 x Steelplay® wireless controllers
- 1 x charging cable
- 2 x manuals

DESCRIPTION

ENGLISH

Thank you for your purchase of a Steelplay® Twin Pads Controller!

Δ This symbol identifies safety and health messages in this product guide. Read this guide for important safety and health information for the product that you have purchased.

Δ WARNING: FAILURE TO PROPERLY SET UP, USE, AND CARE FOR THIS PRODUCT CAN INCREASE THE RISK OF SERIOUS INJURY, DEATH, PROPERTY DAMAGE, OR DAMAGE TO THE PRODUCT OR RELATED ACCESSORIES. READ THIS PRODUCT GUIDE FOR IMPORTANT SAFETY AND HEALTH INFORMATION AND RETAIN THESE DOCUMENTS FOR FUTURE REFERENCE CAREFULLY. PLEASE KEEP OUT OF REACH OF YOUNG CHILDREN.

IMPORTANT PRODUCT SAFETY INFORMATION

1. Safety of children and vulnerable people. Δ WARNING: Choking Hazard

This device may contain small parts that may be a choking hazard to children under 3. Keep small parts away from children. Make sure to never leave this product within the reach of young children. Do not let children play with the device. Do not leave packaging within the reach of children. Children should not clean or attempt any maintenance on the device unsupervised. Make sure children using this product play safely and within their limits, and make sure that they understand proper use of the device.

2. General Security and use. Δ WARNING: Risk of injury, electric shock, fire, burns or damage to the device.

Δ WARNING: Do not attempt repairs

Δ WARNING: Do not allow your accessory to become wet

This device is designed for domestic indoor use and should not be used otherwise. Follow the safety instructions in the manual. Do not use or store the device in dusty/dirty areas as its moving parts and electronic components can be damaged. Do not use or store the device in hot/dry areas, do not disassemble, do not open, do not crash, do not bend, do not deform the product or any of its parts, this could seriously damage them. Do not use the product with wet hands and avoid any kind of moisture. Do not use water to clean the product or any other cleaning agent. Do not use abrasive cleaners, scouring pads, solvents and/or other cleaning agents. Do not use the product if you are unable to attempt to clean connectors. Do not disassemble the product yourself. All repairs must be performed by qualified personnel. Prevent any liquid from entering the product. Do not leave the battery near a heat source such as radiator. Do not insert any object other than those permitted in the product. Do not short circuit. Do not touch the battery terminals. Do not place heavy objects on the product. Avoid excessive shock or vibration of the product. The use of the device in wet areas is prohibited. Do not place objects filled with liquids such as vases on the device. Do not spray water or steam to clean the unit. Any evidence of any attempt to open and/or modify this device, including any peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

OPERATION

1. Console settings

Turn on the console, in the «Home» menu select «Controllers» then «Change grip/orders».

b. Press and hold the «Mode» button on the right or left pad for 3 seconds. The LED flashes quickly and switches to Bluetooth synchronization mode. As soon as both pads have appeared on the screen, follow the instructions on the console screen.

Your pads are now synchronized and functional on your console.

4. Disposal. Δ WARNING: Risk of injury or suffocation

Observe the safety rules when disposing of waste electrical and electronic equipment (WEEE).

5. Cables. Δ CAUTION: Cables and Cords

Use the cables and cords in accordance with the instructions. Do not use any cable strain cords so that people and pets are not likely to trip over or accidentally pull on them as they move around and walk through the area. Keep cables and cords out of reach of children and pets. Do not let the cord is not in contact with hot objects like a heater.

Δ WARNING: Battery Safety

The device is powered by a rechargeable battery. The following precautions apply to all products that use disposable or rechargeable batteries including lithium-ion. Improper battery use may result in serious injury, death, property damage, or damage to the product or related accessories as a result of battery fluid leakage, fire, overheating, or explosion.

Rechargeable battery fluid is corrosive and eye burns and eye injury can be caused if it gets into your eyes. Swallowed. To reduce the risk of injury, keep batteries out of reach of children. If a battery leaks, remove all batteries being careful to keep the leaked fluid from touching your skin or clothes. If fluid from the battery contacts skin or clothes, flush skin with water immediately. Before inserting new batteries, thoroughly clean the battery compartment with a dry cloth, or follow the battery manufacturer's recommendations for cleanup. The full performance of a new battery is achieved only after 2 or 3 complete charge and discharge cycle. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. Do not dispose of batteries in a fire as they

may explode. Please dispose of batteries according to local regulations and recycle where possible.

Do not dispose of batteries as household waste. Do not crush, open, puncture, mutilate, heat above 35° C (95° F), apply direct heat to, or dispose of batteries in fire. Do not mix new and old batteries or batteries of different types (for example, carbon-zinc and alkaline batteries). Do not allow metal objects to touch the battery terminals on the device; they can become hot and cause burns. Do not carry or place batteries together with necklaces, hairpins or other metal objects. Do not leave a battery-operated device in direct sunlight for an extended period, such as on the dash of car during the summer. Do not immerse batteries in water or allow them to become wet. Do not connect batteries directly to wall outlets or car cigarette-lighter sockets. Do not strike, throw, step on, or subject batteries to severe physical shock. Do not pierce battery casings in any manner. Do not attempt to disassemble or modify batteries in any way. Do not recharge batteries near a fire or in extremely hot conditions.

4. Reset joystick. The Twin Pads do not charge on the console.

5. Calibrating the sensor (perform this step only if the controllers do not operate accurately)

Place the controller on a flat surface. Press «St+Mode» and the directional cross on the left controller or an A/B/X/Y button on the right controller to turn the controller on until LEDs 1 & 2 are lit. Then release the buttons and press the SR button to calibrate.

6. 3D calibration (perform this step only if the controllers do not work accurately)

Press L3/R3 and the directional cross on the left controller or an A/B/X/Y button on the right controller to turn the controller on until LEDs 3 & 4 are lit. Then release the buttons and press the SR button to start calibration. LED 1/2/3/4 are on. Move the left or right stick several times and press SR to complete the calibration.

7. Loading

IMPORTANT: The Twin Pads do not charge on the console.

The micro USB ports on the side of each controller are used to load and update the controllers. Plug the micro USB connectors of the charging cable into each micro USB port of the controllers. Then connect the USB connector of the cable to the USB port of your PC or to an AC outlet using an adapter (not included). The recharging time of the controllers is about 2 hours.

8. Updating the controller system

If the console is updated, an update of the controllers may also be necessary. Hold the SR button down on an A/B/X/Y button on the right controller or on the directional cross on the left controller, the controller will switch to PC mode. LED 3 & 4 will be lit. Connect the controller by plugging the «USB» connector of the charging cable into the controller and the USB connector to your PC (or continue to press the SR key and connect the PC via USB), updating the controller via the system. Follow the firmware instructions until the update operation is successfully completed (firmware available on http://www.steel-play.com/fr_FR/)

LED: Each controller has 4 LEDs.

a. When the joystick is off, press the directional cross on the left joystick or an A/B/X/Y button on the right joystick for 1-1.5 seconds to turn the joystick on. The 4 LEDs flash.

b. Press and hold the MODE button for 3 seconds. 4 LEDs will flash quickly. Once the controller is successfully connected to the console, the corresponding LED lights up.

c. When the controller voltage is less than 3.5 V when connected to the console, the corresponding LED flashes slowly. When the joystick voltage is less than 3.4 V, the joystick automatically turns off.

d. When the connection is established, if the console is disabled in Bluetooth or switches to standby mode, the controller automatically turns off and the corresponding LED also turns off.

e. When charging the controller via micro USB when the controller is off, the 4 LEDs flash slowly. The 4 LEDs turn off when the controller is fully charged.

f. When charging the controller by micro USB when the controller is connected to the console, the corresponding LED flashes slowly. When the controller is fully charged, the LED turns off.

g. The Switch console can be connected with 7 controllers at the same time, on 4 channels. Each channel can be connected with 1 left or right controller.

LED1 lights up when the controller is connected to channel 1.

LED1+LED2 lights up if the controller is connected to channel 2.

LED1+LED2+LED3 lights up if the controller is connected to channel 3.

LED1+LED2+LED2+LED3+LED4 lights up if the controller is connected to channel 4.

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

4. Reset joystick. The Twin Pads do not charge on the console.

5. Calibrating the sensor (perform this step only if the controllers do not operate accurately)

Place the controller on a flat surface. Press «St+Mode» and the directional cross on the left controller or an A/B/X/Y button on the right controller to turn the controller on until LEDs 1 & 2 are lit. Then release the buttons and press the SR button to calibrate.

6. 3D calibration (perform this step only if the controllers do not work accurately)

Press L3/R3 and the directional cross on the left controller or an A/B/X/Y button on the right controller to turn the controller on until LEDs 3 & 4 are lit. Then release the buttons and press the SR button to start calibration. LED 1/2/3/4 are on. Move the left or right stick several times and press SR to complete the calibration.

7. Loading

IMPORTANT: The Twin Pads do not charge on the console.

The micro USB ports on the side of each controller are used to load and update the controllers. Plug the micro USB connectors of the charging cable into each micro USB port of the controllers. Then connect the USB connector of the cable to the USB port of your PC or to an AC outlet using an adapter (not included). The recharging time of the controllers is about 2 hours.

8. Updating the controller system

If the console is updated, an update of the controllers may also be necessary. Hold the SR button down on an A/B/X/Y button on the right controller or on the directional cross on the left controller, the controller will switch to PC mode. LED 3 & 4 will be lit. Connect the controller by plugging the «USB» connector of the charging cable into the controller and the USB connector to your PC (or continue to press the SR key and connect the PC via USB), updating the controller via the system. Follow the firmware instructions until the update operation is successfully completed (firmware available on http://www.steel-play.com/fr_FR/)

LED: Each controller has 4 LEDs.

a. When the joystick is off, press the directional cross on the left joystick or an A/B/X/Y button on the right joystick for 1-1.5 seconds to turn the joystick on. The 4 LEDs flash.

b. Press and hold the MODE button for 3 seconds. 4 LEDs will flash quickly. Once the controller is successfully connected to the console, the corresponding LED lights up.

c. When the controller voltage is less than 3.5 V when connected to the console, the corresponding LED flashes slowly. When the joystick voltage is less than 3.4 V, the joystick automatically turns off.

d. When the connection is established, if the console is disabled in Bluetooth or switches to standby mode, the controller automatically turns off and the corresponding LED also turns off.

e. When charging the controller via micro USB when the controller is off, the 4 LEDs flash slowly. The 4 LEDs turn off when the controller is fully charged.

f. When charging the controller by micro USB when the controller is connected to the console, the corresponding LED flashes slowly. When the controller is fully charged, the LED turns off.

g. The Switch console can be connected with 7 controllers at the same time, on 4 channels. Each channel can be connected with 1 left or right controller.

LED1 lights up when the controller is connected to channel 1.

LED1+LED2 lights up if the controller is connected to channel 2.

LED1+LED2+LED3 lights up if the controller is connected to channel 3.

LED1+LED2+LED2+LED3+LED4 lights up if the controller is connected to channel 4.

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Channel :

Union. To eliminate these products, it should comply with applicable national legislation or other regulations in your country for the two, an electrical and electronic equipment and used batteries.

CE This product is CE compliant and has the CE mark according to the following European Directives:

• Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)

• Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

• Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Information and views expressed in this document, including URL and other Internet website references, may change without notice. This document does not provide you with any legal right to any intellectual property in any Steelplay product. You may copy and use this document for your internal reference purposes.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

• Hereby, E-Concept declares that the radio equipment type Twin Pads Controllers is in compliance with Directive 2014/53/EU.

• The full text of the EU declaration of conformity is available at the following internet address: http://www.steel-play.com/en_US/

• Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)

• Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

• Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Information and views expressed in this document, including URL and other Internet website references, may change without notice. This document does not provide you with any legal right to any intellectual property in any Steelplay product. You may copy and use this document for your internal reference purposes.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

• Hereby, E-Concept declares that the radio equipment type Twin Pads Controllers is in compliance with Directive 2014/53/EU.

• The full text of the EU declaration of conformity is available at the following internet address: http://www.steel-play.com/en_US/

• Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)

• Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

• Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Information and views expressed in this document, including URL and other Internet website references, may change without notice. This document does not provide you with any legal right to any intellectual property in any Steelplay product. You may copy and use this document for your internal reference purposes.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

• Hereby, E-Concept declares that the radio equipment type Twin Pads Controllers is in compliance with Directive 2014/53/EU.

• The full text of the EU declaration of conformity is available at the following internet address: http://www.steel-play.com/en_US/

• Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)

• Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

• Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Information and views expressed in this document, including URL and other Internet website references, may change without notice. This document does not provide you with any legal right to any intellectual property in any Steelplay product. You may copy and use this document for your internal reference purposes.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

• Hereby, E-Concept declares that the radio equipment type Twin Pads Controllers is in compliance with Directive 2014/53/EU.

• The full text of the EU declaration of conformity is available at the following internet address: http://www.steel-play.com/en_US/

• Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)

• Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

• Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility

Information and views expressed in this document, including URL and other Internet website references, may change without notice. This document does not provide you with any legal right to any intellectual property in any Steelplay product. You may copy and use this document for your internal reference purposes.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

